


BHG300.6SS
30 cm 2 Burner
Gas Hob

INSTRUCTION MANUAL

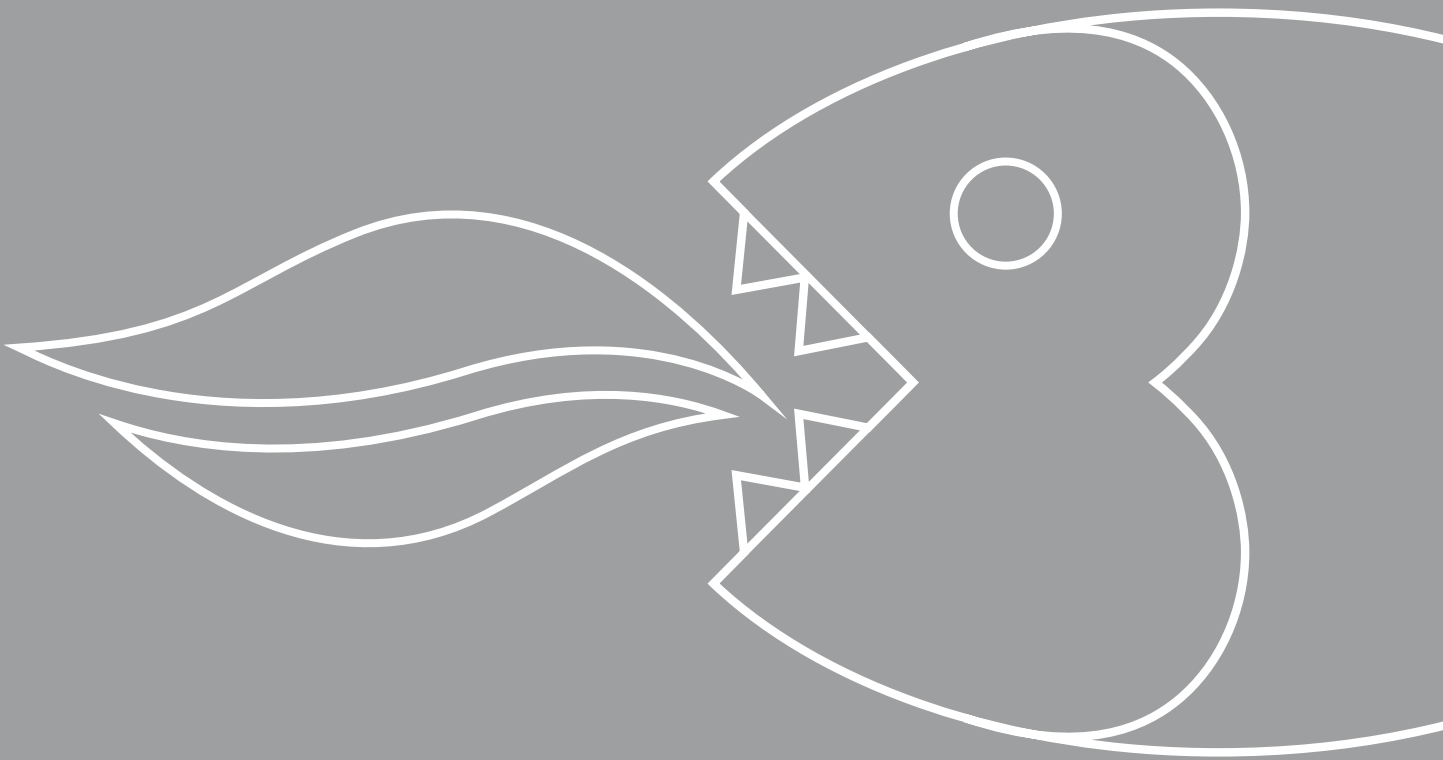

INSTRUCTIONS AND ADVICE FOR THE USE, INSTALLATION AND MAINTENANCE OF MIXED AND GAS FUELLED BUILT-IN GAS HOB

Dear Customer,

Thank you for having purchased one of our products.

We are certain that this new, modern, functional and practical appliance, built with the very highest quality materials, will meet your requirements in the best possible way. This appliance is easy to use. It is, however, important to thoroughly read the instructions in this handbook in order to obtain the best results.

These instructions are only valid for the countries of destination, the identification symbols of which are indicated on the cover of the instruction manual and on the appliance itself.

The manufacturer shall not be held responsible for any damages to persons or property caused by incorrect installation or use of the appliance.


Baumatic

MODEL: BHG300.6SS

The Manufacturer shall not be held responsible for any inaccuracies in this handbook due to printing or transcription errors; the designs in the figures are purely indicative. The Manufacturer also reserves the right to make any modifications to the products as may be considered necessary or useful, also in the interests of the user, without jeopardizing the main functional and safety features of the products themselves. ***This hob was designed to be used exclusively as a cooking appliance: any other use (such as heating rooms) is to be considered improper and dangerous.***

DESCRIPTION OF THE BURNERS

MODEL: MODEL: BHG300.6SS

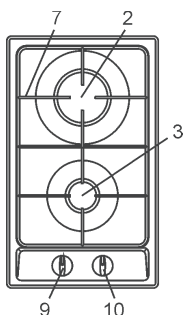

2 Rapid gas burner

of 3000 W

3 Auxiliary gas burner

of 1000 W

7 Enamelled steel pan support

9 Burner n° 2 control knob

10 Burner n° 3 control knob

Attention: This appliance has been manufactured for domestic use only and it's use by private persons.

USE

1) BURNERS

A diagram is printed above each knob on the front panel. This diagram indicates to which burner the knob in question corresponds. After having opened the gas mains or gas bottle tap, light the burners as described below:

- Manual ignition

Push and turn the knob corresponding to the required burner in an anticlockwise direction until it reaches the full on position (large flame fig. 1), then place a lighted match near the burner.

- Automatic electrical ignition

Push and turn the knob corresponding to the required burner in an anticlockwise direction until it reaches the full on position (large flame fig. 1), then depress the knob.

- Lighting burners equipped with flame failure device

The knobs of burners equipped with flame failure device must be turned in an anticlockwise direction until they reach the full on position (large flame fig. 1) and come to a stop. Now depress the knob in question and repeat the previously indicated operations.

Keep the knob depressed for about 10 seconds once the burner has ignited.

HOW TO USE THE BURNERS



Bear in mind the following indications in order to achieve maximum efficiency with the least possible gas consumption:

- Use adequate pans for each burner (consult the following table and fig. 2).
- When the pan comes to the boil, set the knob to the reduced rate position (small flame fig. 1).
- Always place a lid on the pans.
- Use only pan with a flat bottom.

Burners	Power ratings	Pan Ø in cm
Rapid	3000	20 ÷ 22
Auxiliary	1000	10 ÷ 14

WARNINGS:

- **Burners with flame failure device may only be ignited when the relative knob has been set to the Full on position (large flame fig. 1).**
- **Matches can be used to ignite the burners in a blackout.**
- **Never leave the appliance unattended when the burners are being used. Make sure there are no children in the near vicinity. Particularly make sure that the pan handles are correctly positioned and keep a check on foods requiring oil and grease to cook since these products can easily catch fire.**
- **Never use aerosols near the appliance when it is operating.**
- **If the built-in hob has a lid, any spilt food should be immediately removed from this before it is opened. If the appliance has a glass lid, this could shatter when the hob becomes hot. Always switch off all the burners before closing the lid.**
- **Do not use the hob as a work surface.**
- **Do not place pans with an unstable or deformed bottom on the burner, as these may tip or spill their contents, causing accidents. - The appliance must not be used by people (including children) with impaired mental or physical capacities, or without experience of using electrical devices, unless supervised or instructed by an expert adult responsible for their care and safety. Children should not be allowed to play with the equipment.**
- **Containers wider than the unit are not recommended.**

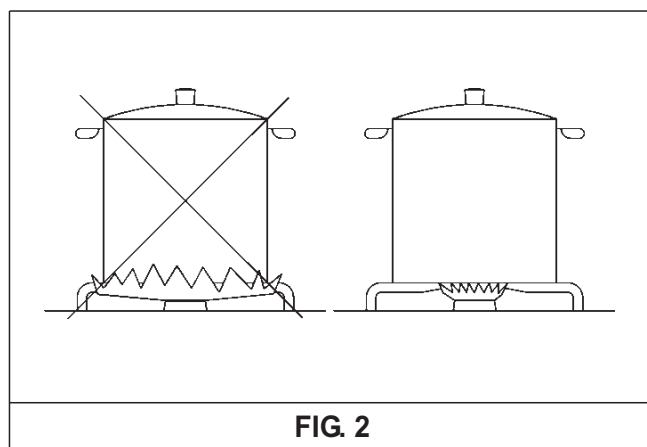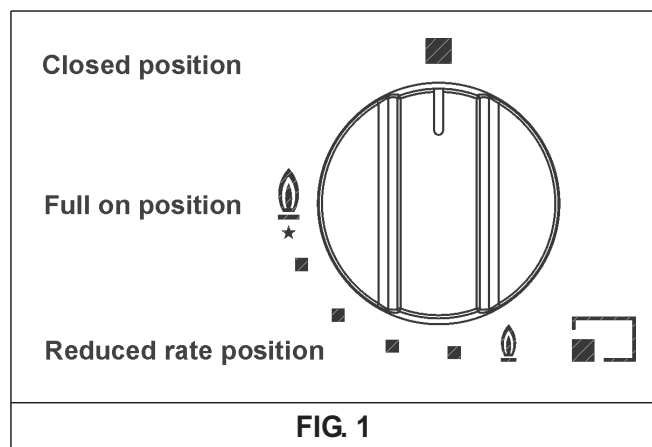

USE

WARNINGS AND ADVICE FOR THE USER:

Use of a gas cooking appliance produces heat and moisture in the room in which it is installed. The room must therefore be well ventilated by keeping the natural air vents clear (fig. 3) and by activating the mechanical aeration device (extraction hood or electric fan fig 4 and fig 5). Intensive and lengthy use of the appliance may require additional ventilation. This can be achieved by opening a window or by increasing the power of the mechanical exhausting system if installed.

- *Do not attempt to change the technical characteristics of the product because it can be dangerous.*
- *If you should not to use this appliance any more (or replace an old model), before disposing of it, make it inoperative in conformity with current law on the protection of health and the prevention of environmental pollution by making its dangerous parts harmless, especially for children who might play on an abandoned appliance.*
- *Do not touch the appliance with wet or damp hands or feet.*
- *Do not use the appliance barefoot.*
- *The manufacturer will not be liable for any damage resulting from improper, incorrect or unreasonable use.*
- *During, and immediately after operation, some parts of the hob are very hot: avoid touching them.*
- *After using the cook top, make sure that the knobs are in the closed position and close the main tap of the gas supply or gas cylinder.*
- *If the gas taps are not operating correctly, call the Service Department.*

Warning: during operation the work surfaces of the cooking area become very hot: keep children away!

(*) AIR INLET: SEE INSTALLATION CHAPTER (PARAGRAPHS 5 AND 6)

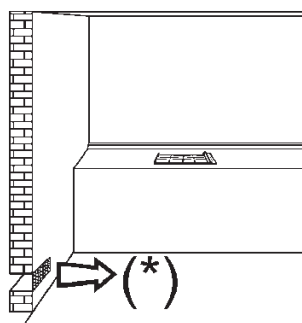


FIG. 3

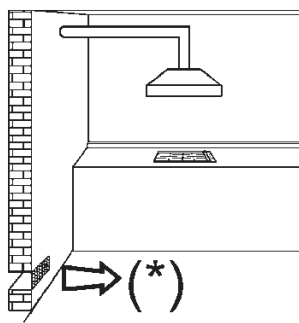


FIG. 4

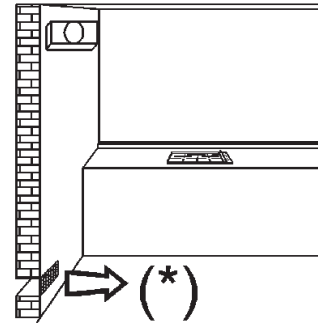


FIG. 5

CLEANING

IMPORTANT:

Always disconnect the appliance from the gas and electricity mains before carrying out any cleaning operation.

2) GAS HOB

Periodically wash the hob, pan stands, enamelled burner covers "C", and burner heads "T" (see fig. 6) must also be washed and the ignition elements "AC" and safety cut-off sensors "TC" (see fig. 6) must be cleaned. Do not wash them in the dishwasher. Following this, all parts should be thoroughly rinsed and dried. Never wash them while they are still warm and never use abrasive powders. Do not allow vinegar, coffee, milk, salted water, lemon or tomato juice to remain in contact with the enamelled surfaces for long periods of time.

WARNINGS:

Comply with the following instructions, before remounting the parts:

- ***Check that burner head slots "T" (fig. 6) have not become clogged by foreign bodies.***
- ***Check that enamelled burner cap "C" (fig. 6) is correctly positioned on the burner head. It must be steady.***
- ***The exact position of the pan support is established by the rounded corners, which should be set towards the side edge of the hob.***
- ***Do not force the taps if they are difficult to open or close. Contact the technical assistance service for repairs.***
- ***Don't use steam jets for the equipment cleaning.***

Note: continuous use could cause the burners to change colour due to the high temperature.

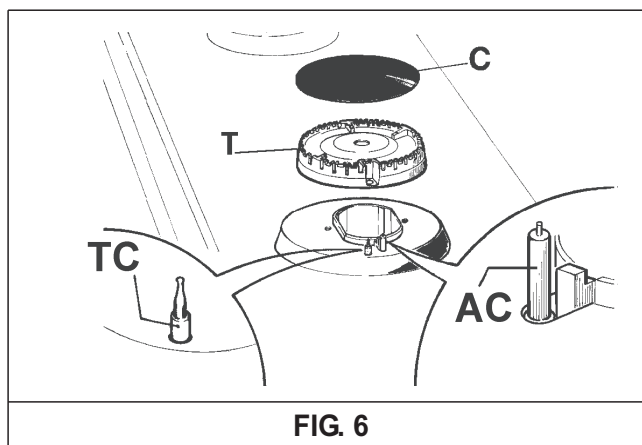


FIG. 6

INSTALLATION

TECHNICAL INFORMATION FOR THE INSTALLER

Installation, adjustments of controls and maintenance must only be carried out by a qualified engineer.

The appliance must be correctly installed in conformity with current law and the manufacturer's instructions.

Incorrect installation may cause damage to persons, animals or property for which the Manufacturer shall not be considered responsible.

During the life of the system, the automatic safety or regulating devices on the appliance may only be modified by the manufacturer or by his duly authorized dealer.

3) INSTALLING THE HOB

IMPORTANT: A perfect installation, adjustment or transformation of the hob to use other gases requires a QUALIFIED GASSAFE INSTALLER: a failure to follow this rule will void the warranty.

Check that the appliance is in a good condition after having removed the outer packaging and internal wrappings from around the various loose parts. In case of doubt, do not use the appliance and contact qualified personnel.

Never leave the packaging materials (cardboard, bags, polystyrene foam, nails, etc.) within children's reach since they could become potential sources of danger.

The measurements of the opening made in the top of the modular cabinet and into which the hob will be installed are indicated in either fig. 7. Always comply with the measurements given for the hole into which the appliance will be recessed (see fig. 7 and 8).

The appliance belongs to class 3 and is therefore subject to all the provisions

established by the provisions governing such appliances.

4) FIXING THE HOB

The hob has a special seal which prevents liquid from getting into the cabinet. Strictly comply with the following instructions in order to correctly apply this seal:

- Detach the seals from their backing, checking that the transparent protection still adheres to the seal itself.
- Overturn the hob and correctly position seal "E" (fig. 9) under the edge of the hob itself, so that the outer side of the seal perfectly matches the outer edge of the hob. The ends of the strips must fit together without overlapping.
- Evenly and securely fix the seal to the hob, pressing into place with the fingers and remove the strip of protective paper from the seal and set the hob into the hole made in the cabinet.
- Fix the hob with the proper brackets "S" and fit the prominent part into the porthole "H" on the bottom; turn the screw "F" until the bracket "S" stick on the top (fig. 10).
- **IMPORTANT:** When not installing above an oven, underneath the appliance there must be a partition made of insulating material (e.g. wood). There must be a gap of at least 70 mm between the underneath of the appliance and this partition (fig. 7.).

COMPLY WITH THE DIMENSIONS (mm)

	A	B	C	D	E
2F	280	482	59	59	100 min.

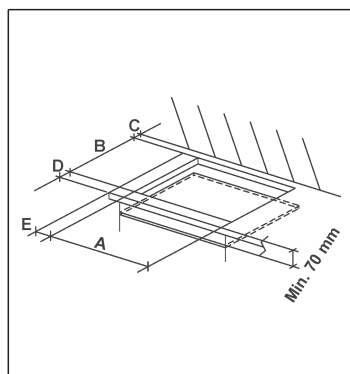


FIG. 7

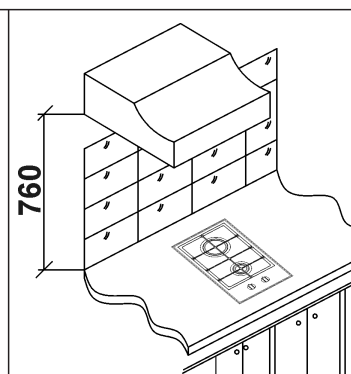


FIG. 8

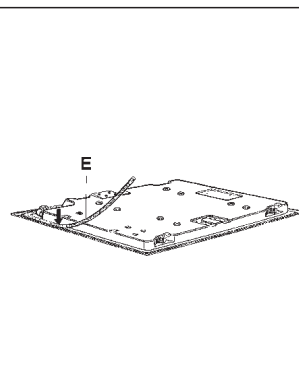


FIG. 9

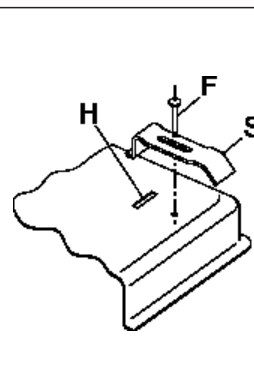


FIG. 10

INSTALLATION

IMPORTANT INSTALLATION SPECIFICATIONS

The rear wall and the surfaces surrounding and adjacent to the appliance must be able to withstand an overtemperature of 65 K. The adhesive used to stick the plastic laminate to the cabinet must be able to withstand a temperature of not less than 150 °C otherwise the laminate could come unstuck. The appliance must be installed in compliance with BS 6172 1990, BS 5440 part. 2 1989 and BS 6891 1988. This appliance is not connected to a device able to dispose of the combustion fumes. It must therefore be connected in compliance with the above mentioned installation standards. Particular care should be paid to the following provisions governing ventilation and aeration.

5) ROOM VENTILATION

To ensure correct operation of the appliance, it is important to ensure that the room where the hob is installed has sufficient ventilation, as set out in BS 5440 part 2. 1989. See table below.

Type of appliance	Volume of room cubic metres	Min. size of vent sq. cm.	Openable window or alternative method of venting to the outside
Domestic ovens hobs or any combinations	5	100	yes
	5 to 10	50	yes
	11 to 20	nil	yes
	20 and above	nil	yes

Natural air flow must enter directly through permanent openings in the walls of the room in question. These must open towards the outside and possess a minimum section of 100 cm² see fig. 3). It must be impossible to obstruct these openings. Indirect ventilation with air drawn from adjacent rooms is permitted in strict compliance with the provisions in force.

6) LOCATION AND AERATION

Gas cooking appliances must always dispose of their combustion fumes through hoods. These must be connected to flues, chimneys or straight outside. If it is not possible to install a hood, an electric fan can be installed on a window or on a wall facing outside (see fig. 4). This must be activated at the same time as the appliance (see fig. 5), so long as the specifications in the provisions in force are strictly complied with.

7) GAS CONNECTION

Before connecting the appliance, check the values on the data label affixed to the underside of the hob correspond to those of the gas mains in the home. A label on the appliance indicates the regulating conditions: type of gas and working pressure.

WARNING:

A gas hob can only be connected by a GASSAFE

Registered engineer.

Installations should be carried out in accordance with BS 6891 1988 and must comply with the Gas Safety Regulations.

All hob installations must include an isolation tap.

GAS PRESSURE TEST

Some hob models have a test point fitted under the control panel, to conduct a gas pressure test proceed as follows:

- Turn off the gas supply.
- Remove screw in the pressure test point, place test gauge connecting tube on test point.
- Fit a burner ring and cap onto burner assembly, replace control knob onto corresponding control tap for the burner.
- Turn on gas and ascertain working pressure.

After test, turn off control tap, turn off gas supply, disconnect test gauge connecting tube. Replace the test point screw, turn gas back on and test for soundness. Reassemble the hob.

IMPORTANT:

the appliance complies with the provisions of the following CEE Directives:

- 2009/142 + 93/68 regarding gas safety.

INSTALLATION

8) ELECTRICAL CONNECTION

IMPORTANT: the appliance must be installed following the manufacturer's instructions. The manufacturer will not be liable for injury to persons or animals or property damage caused by an incorrect installation.

The electrical connections of the appliance must be carried out in compliance with the provisions and standards in force.

Before connecting the appliance, check that:

- The electrical capacity of the mains supply and current sockets suit the maximum power rating of the appliance (consult the data label applied to the underside of the hob).
- The voltage matches the value shown on the specification plate and the section of the wires of the electrical system can support the load, which is also indicated on the specification plate
- The socket or system has an efficient earth connection in compliance with the provisions and standards in force. The manufacturer declines all responsibility for failing to comply with these provisions.

When the appliance is connected to the electricity main by a socket:

- Fit a standard plug suited to the load indicated on the data label to the cable.
- Fit the wires following figure n.11, taking care to respect the following wiring colour codes:

letter L (live) = brown wire;

letter N (neutral) = blue wire;

earth symbol \perp = green - yellow wire

- The power supply cable must be positioned so that no part of it is able to reach an temperature of 90 °C.
- Never use reductions, adapters or shunts for connection since these could create false contacts and lead to dangerous overheating.
- The outlet must be accessible after being built-in.

When the appliance is connected straight to the electricity mains:

- Install an omnipolar circuit-breaker between the appliance and the electricity main. This circuit-breaker should be sized according to the load rating of the appliance and possess a minimum 3

mm gap between its contacts.

- Remember that the earth wire must not be interrupted by the circuit-breaker.
 - The electrical connection may also be protected by a high sensitivity differential circuit- breaker.
- You are strongly advised to fix the relative yellow-green earth wire to an efficient earthing system.

Before performing any service on the electrical part of the appliance, it must absolutely be disconnected from the electrical network.

If the installation requires modifications to the home's electrical system or if the socket is incompatible with the appliance's plug, have changes or replacements performed by a professionally-qualified person. In particular, this person must also make sure that the section of the wires of the socket is suitable for the power absorbed by the appliance.

WARNINGS:

All our appliances are designed and manufactured in compliance with European standards EN 60 335-1, EN 60 335-2-6 and EN 60 335-2-102 plus the relative amendments. The appliance complies with the provisions of the following EEC Directives:

- CEE 2004/108/CE regarding to electromagnetic compatibility.
- CEE 2006/95 regarding electrical safety.

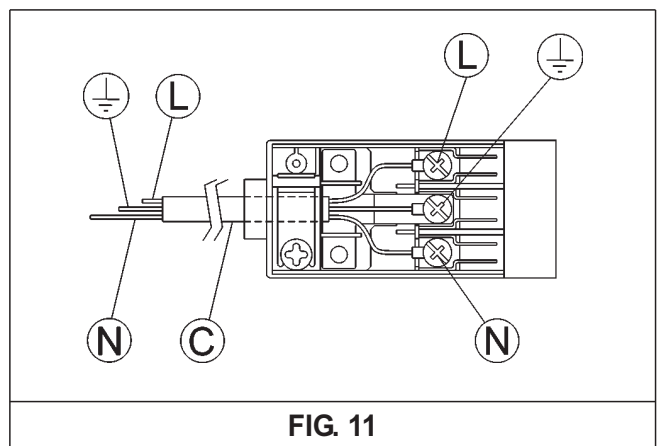


FIG. 11

ADJUSTMENTS

Always disconnect the appliance from the electricity main before making any adjustments. All seals must be replaced by the technician at the end of any adjustments or regulations. Our burners do not require primary air adjustment.



It is understood that only burners operating with G20 gas should be subjected to the above mentioned adjustments. The screw must be fully locked when the burners operate with G30 or G31 gas (turn clockwise).

9) TAPS

“Reduced rate” adjustment

- Switch on the burner and turn the relative knob to the “Reduced rate” position (small flame fig. 1).
- Remove knob “M” (fig. 12 and 12/A) of the tap, which is simply pressed on to its rod. The by-pass for minimal rate regulation can be: beside the tap (fig. 12) or inside the shaft. In any case, to access to regulation, it can be done through the insertion of a small screwdriver “D” beside the tap (fig. 12) or in the hole “C” inside the shaft of the tap (fig 12/A). Turn the throttle screw to the right or left until the burner flame has been adequately regulated to the “Reduced rate” position.

The flame should not be too low: the lowest small flame should be continuous and steady. Re-assemble the several components.

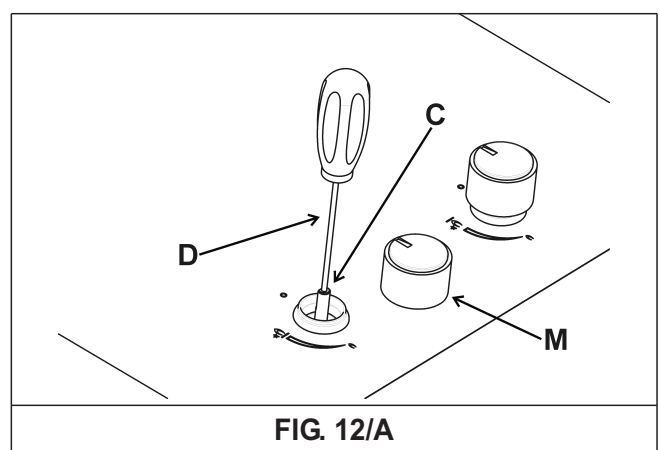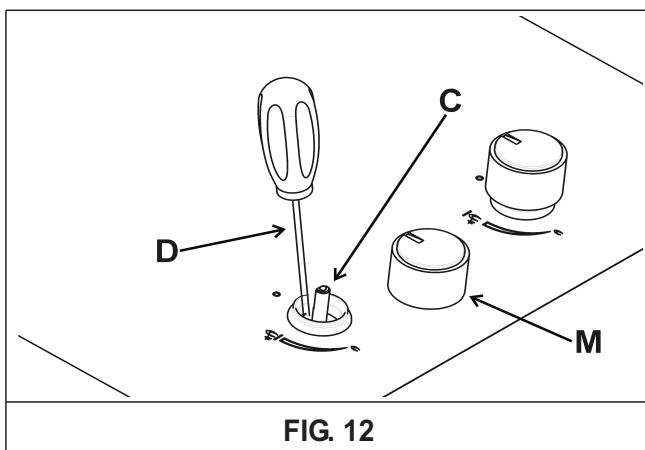

CONVERSIONS

10) REPLACING THE INJECTORS

The burners can be adapted to different types of gas by mounting injectors suited to the type of gas in question. To do this, first remove the burner tops using a wrench "B". Now unscrew injector "A" (see fig. 13) and fit a injector corresponding to the utilised type of gas in its place.


It is advisable to strongly tighten the injector in place.

After the injectors have been replaced, the burners must be regulated as explained in

paragraphs 9. The technician must reset any seals on the regulating or pre-regulating devices. The envelope with the injectors and the labels can be included in the kit, or at disposal to the authorized customer Service Centre.

For the sake of convenience, the nominal rate table also lists the heat inputs of the burners, the diameter of the injectors and the working pressures of the various types of gas.

BURNER ARRANGEMENT ON THE HOB

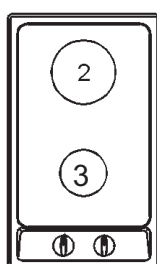

BURNERS		GAS	NORMAL PRESSURE mbar	NORMAL RATE		INJECTOR DIAMETER 1/100 mm	NOMINAL HEAT INPUT (W)	
N°	DESCRIPTION			g/h	l/h		Min.	Max.
2	RAPID	G30 - BUTANE	28 - 30	218	286	85	800	3000
		G31 - PROPANE	37	214		85	800	3000
		G20 - NATURAL	20			115 Y	800	3000
3	AUXILIARY	G30 - BUTANE	28 - 30	73	95	50	400	1000
		G31 - PROPANE	37	71		50	400	1000
		G20 - NATURAL	20			72 X	400	1000

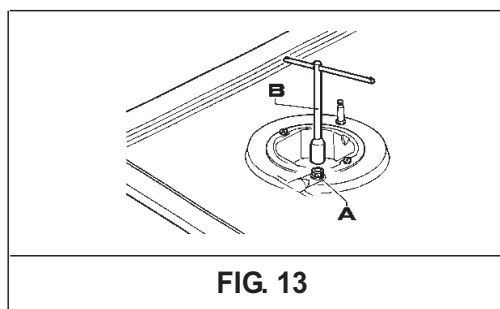


FIG. 13

SERVICING

Always disconnect the appliance from the electricity and gas mains before proceeding with any servicing operation.

11) REPLACING HOB PARTS

To replace the components fit inside the hob is necessary to take off the pan supports and the burners from the upper part of the hob top, then unscrew the burner fixing screws "V" (fig. 14) and the control knobs, fixed by a simple pressure, in order to take off the hob top.

After having carried out the above listed operations, the burners (fig. 15), taps (fig. 16) and electrical components can all be replaced (fig. 17).

It is advisable to change seal "D" (fig.16) whenever a tap is replaced to ensure a perfect tightness.

Greasing the taps (see fig. 18 - 19)

If a tap becomes stiff to operate, it must be immediately greased in compliance with the following instructions:

- Remove the tap.
- Clean the cone and its housing using a cloth soaked in diluent.
- Lightly spread the cone with the relative grease.
- Fit the cone back in place, operate it several times and then remove it again. Eliminate any excess grease and check that the gas ducts have not become clogged.
- Fit all parts back in place, complying with the demounting order in reverse.
- The gas soundness test must be done using a foamy liquid.

WARNING:
MAINTENANCE MUST ONLY BE PERFORMED
BY AUTHORISED PERSONS.

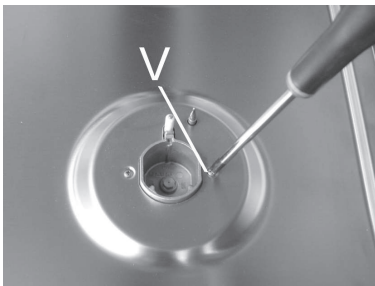


FIG. 14

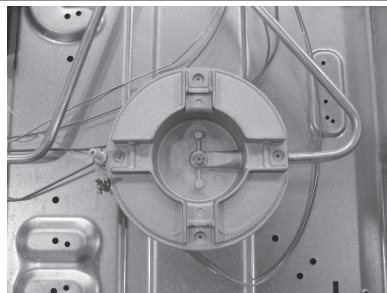


FIG. 15

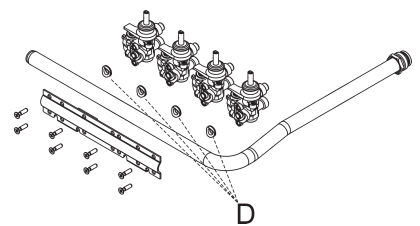


FIG. 16

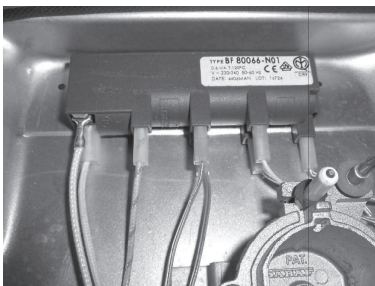


FIG. 17

 


FIG. 18

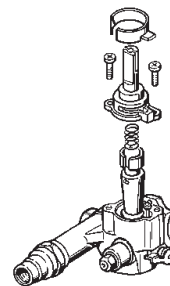


FIG. 19


SERVICING

CABLE TYPES AND SECTIONS

TYPE OF HOB	TYPE OF CABLE	SINGLE - PHASE POWER SUPPLY
Gas Hob	H05 RR - F	Section 3 x 0.75 mm ²

ATTENTION!!!

If the power supply cable is replaced, the installer should leave the ground wire longer than the phase conductors (fig. 20) and comply with the recommendations given in paragraph 8.

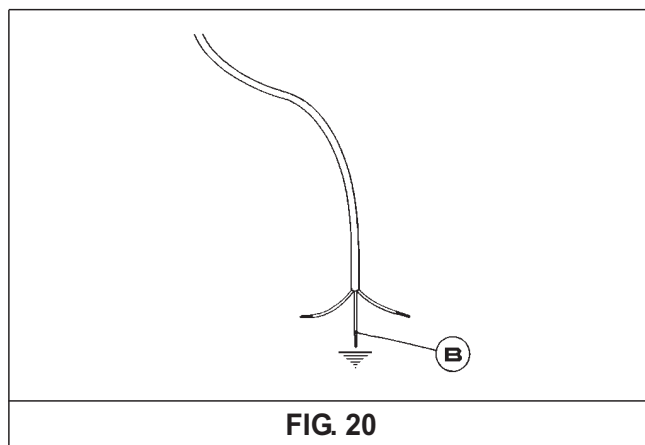

TECHNICAL DATA ON THE DATA LABEL

2 BURNERS “ DOMINO ”

Category = $\text{II}_{2\text{H}3+}$

G30 - BUTANE = 28 - 30 mbar

G31 - PROPANE = 37 mbar

G20 - NATURAL = 20 mbar

Tot. Nom. Gas Rate = 4 kW

Tot. Nom. L.P.G. Rate = 291 g/h (G30)

286 g/h (G31)

Voltage = 220 - 240 V~

Frequency = 50/60 Hz

TECHNICAL DATA FOR THE APPLIANCE GAS REGULATION

ATTENTION !!!!!

This appliance must be installed in compliance with the regulations in force and only used in rooms equipped with adequate ventilation.

Consult the instruction manual before proceeding with installation or use of the appliance.

This household appliance is adjusted to work at

**G 20- "p" 20 mbar
(2H)**

COD. 0030056 - 05/13

TECHNICAL ASSISTANCE AND SPARE PARTS

Before leaving the factory, this appliance will have been tested and regulated by expert and specialised personnel in order to guarantee the best performances.

Any repairs or adjustments which may be subsequently required may only be carried out by qualified personnel with the utmost care and attention.

For this reason, always contact your Dealer or our nearest After Sales Service Center whenever repairs or adjustments are required, specifying the type of fault and the model of the appliance in your possession.

Please also note that genuine spare parts are only available from our After Sales Service Centers and authorised retail outlets.

The above data are printed on the data label put on the underneath of the appliance and on the packing label.

In order that you can obtain information or spare parts relating to your model, we suggest that you complete the table below, for easy reference.

MARK:

MODEL:

SERIES:





United Kingdom

Baumatic Ltd.,
Baumatic Buildings,
6 Bennet Road,
Reading, Berkshire
RG2 0QX
United Kingdom

Sales Telephone

(0118) 933 6900

Sales Fax

(0118) 931 0035

Customer Care Telephone

(0118) 933 6911

Customer Care Fax

(0118) 986 9124

Spares Telephone

(01235) 437244

Advice Line Telephone

(0118) 933 6933

E-mail:

sales@baumatic.co.uk
customercare@baumatic.co.uk
spares@baumatic.co.uk
technical@baumatic.co.uk

Website:

www.baumatic.co.uk

Facebook:

www.facebook.com/baumatic.uk

Republic of Ireland

Service Telephone

1-890 812 724

Spares Telephone

091 756 771

Czech Republic/Slovakia

Baumatic s.r.o.

Lípová 665/1
460 01 Liberec 4
Czech Republic

Panenská 34
811 03 Bratislava - Staré Mesto
Slovakia

+420 483 577 200 (CZ)

+421 255 640 618 (SK)

www.baumatic.cz

www.baumatic.sk

Germany

Kundendienst & Ersatzteile

Deutschland 0049(0)180-5888975

Oesterreich +43 (0) 820 / 420423

www.baumatic.de

Italy

Baumatic Italia S.R.L.
Via Galvani N.3
35011 Campodarsego (PD)

+3904 9920 2297

www.baumatic.it

Holland

Baumatic Benelux B.V.
Dukdalfweg 15d
1332 BH ALMERE
Nederland

+31(0)36 549 1553/1555

www.baumatic.nl

